

Pleated Elements for Bag House Filters

Our pleated elements are used as a final filter stage in micronizer bag houses at the end of the titanium dioxide pigment extraction process. They can be used in any high temperature filtration application ($\leq 260\text{ }^{\circ}\text{C}$ / $500\text{ }^{\circ}\text{F}$).



Product Features

Sefar filter solutions for Bag House Filters

Our pleated elements for bag house filters offer an increased filtration area and provide an improved filtration efficiency compared to conventional filter bags of the same diameter. Sefar X-series is dedicated for the use in demanding, high temperature applications such as drying, micronizing and oxidation in the titanium dioxide pigment beneficiation process.

DOWNLOADS

Brochure: Process Filtration (PDF 5300 kb)

Fabrication solutions

The X-600 is a unique, patented, pleated filter used in finishing of titanium dioxide pigment and other applications.

It surpasses the performance of any regular bags on the market and can increase service life by more than 100%. Outstanding results of 54 months have been shown for product lifetime. This represents the longest lifetime for any micronizer bag house lifetime in the world.

This success is mainly due to a heavy duty assembly, using the Sefar patented aluminum potting system to seal the end caps. The larger surface area from the pleats of the X-600, as compared to conventional bags, allows for significantly increased productivity and lifetime.

Pleated Cartridge X-600


Sefar BDH Inc.

200 rue Clement Gilbert
 Saguenay QC, G7H 5B1 – Canada

Phone +1 418 690 0888
 Fax +1 418 690 9499

info.bdh@sefar.com

[Go to product page](#)

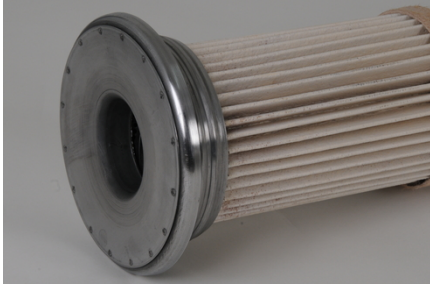


- Increased air flow and superior efficiency

Filter media technology

The new pleated cartridges resist high temperatures and have almost three times the surface area of other filter bags of the same diameter. In addition to providing increased air flow and superior efficiency, the pleated cartridges can replace old filters with no system modifications required.

X-600 High-temperature pleated cartridges

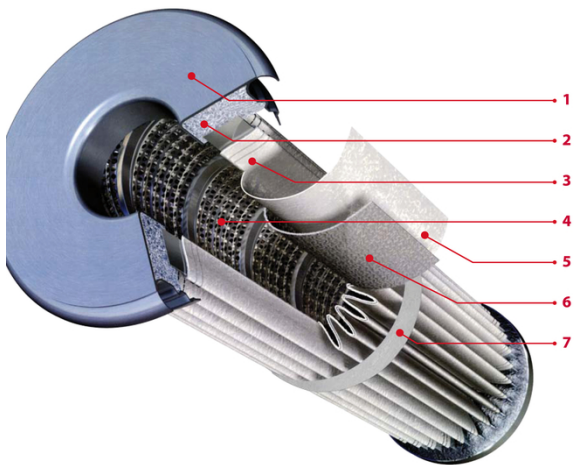

- 1 100 % metal top and end caps
- 2 Ultra-resistant aluminum sealing
- 3 Sealed stitching

Sefar BDH Inc.

200 rue Clement Gilbert
 Saguenay QC, G7H 5B1 – Canada

Phone +1 418 690 0888
 Fax +1 418 690 9499

info.bdh@sefar.com

[Go to product page](#)

- 4 Galvanized steel core
- 5 e-PTFE membrane
- 6 Fiberglass felt with
type A phenolic resin
- 7 Heavy duty stainless
steel bands



CONTACT

- Local contact
- Contact form
- Send mail

Please call us for further information:
Phone CH: +41 71 898 5700

Locations



Sefar BDH Inc.

200 rue Clement Gilbert
Saguenay QC, G7H 5B1 – Canada
Phone: +1 418 690 0888
Fax: +1 418 690 9499

- E-Mail

Sefar BDH Inc.

200 rue Clement Gilbert
Saguenay QC, G7H 5B1 – Canada

Phone +1 418 690 0888
Fax +1 418 690 9499

info.bdh@sefar.com

[Go to product page](#)



Sefar Inc.

Kansas City, MO – USA

Phone: 800 995 0531

Fax: +1 816 452 2183

 [E-Mail](#)



Sefar Inc.

Los Angeles, CA – USA

Phone: 800 995 0531

Fax: +1 909 544 5901

 [E-Mail](#)



Sefar Inc.

Gray, GA – USA

Phone: 800 995 0531

Fax: +1 478 986 6953

 [E-Mail](#)



Sefar Inc.

111 Calumet Street

Buffalo, NY 14043 – USA

Phone: 800 995 0531

Fax:

 [E-Mail](#)

Sefar BDH Inc.

200 rue Clement Gilbert
Saguenay QC, G7H 5B1 – Canada

Phone +1 418 690 0888
Fax +1 418 690 9499

info.bdh@sefar.com

[Go to product page](#)