

# Vacuum Filter Belts

Sefar's innovative synthetic fabrics are the material of choice for horizontal vacuum belt filters. Sefar belts offer excellent separation efficiency and a long, trouble-free lifetime. SEFAR TETEX DLW (double-layer weave) filter media are the industries and OEM preferred solutions for horizontal vacuum belt filters – trust Sefar filter belt solutions!

## Product Information

### Sefar filter belt solutions for Vacuum Belt Filters

Choose Sefar as your trusted source for filtration. We are ready and capable to meet your needs. Understanding the filtration process is one key requirement for filter solution development. This is a Sefar core competence. We have spent decades developing filter media made from synthetic yarns. Sefar's innovative synthetic fabrics are the material of choice for horizontal vacuum belt filters. Sefar filter belt solution offer excellent separation efficiency and a long, trouble-free lifetime.



## DOWNLOADS


Brochure: Process Filtration (PDF 5300 kb)

## Product features

Fitting belts to the specific filter equipment is essential for smooth and efficient filtration performance.

The market-leading expertise of Sefar helps to define the most suitable filter media and fabrication method for your application. With Sefar's unique belt design you can count on a consistent performance.

### Top view of belt filter

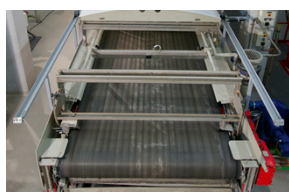

### Vacuum belt filter in operation

#### Sefar BDH Inc.


200 rue Clement Gilbert  
Saguenay QC, G7H 5B1 – Canada

Phone +1 418 690 0888  
Fax +1 418 690 9499

[info.bdh@sefar.com](mailto:info.bdh@sefar.com)

[Go to product page](#)

## Cake discharge

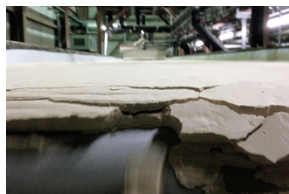

## Many application areas – one solution provider

The wide range of products processed on horizontal vacuum filters requires a large selection of filter media to enhance the specific process. Subsidiaries in 26 countries provide local technical service for the broad range of solutions supplied to the various industries and equipment.



### Chemicals

Sefar products perform at high levels, even under aggressive conditions. Count on Sefar to meet the demands of your application process – whether it's extreme pH, high temperatures, or specific chemical environments like solvents, oxidants, acids or alkalis.

#### Applications:

ABS resin, BPA, catalysts, fertilizer, polymers, pigments, PTA, phosphoric acid, silicates, soda bicarbonate, sulfuric acid, zeolite

### Sefar BDH Inc.

200 rue Clement Gilbert  
Saguenay QC, G7H 5B1 – Canada

Phone +1 418 690 0888  
Fax +1 418 690 9499

[info.bdh@sefar.com](mailto:info.bdh@sefar.com)

[Go to product page](#)



## Minerals

Sefar meets the high quality and productivity demands in challenging applications. Our products offer reliability in filtration by using strong woven fabrics, adapting the correct pore size to



## Environmental

Sefar has a solution for each application used in sludge dewatering. No matter what the characteristics of your treatment, you can trust Sefar to meet the challenges of your sludge dewatering preparation.

Applications:

Coolant purification, flue gas desulfurization, fly ash, waste water



## Life science

Sefar production methods and facilities are integrated to include verifiable traceability for life sciences industries. Only Sefar controls the yarn production, weaving and filtration through to the final filter.

The SEFAR PHARMA GMP program satisfies the regulatory requirements of pharmaceutical applications.

Applications:

Active pharmaceutical ingredients, agrichemicals, nutraceuticals, intermediates



## Food

In food applications, conformity to hygienic and safety guidelines is imperative. For this reason, a reliable supplier like Sefar – able to provide you with FDA or EU compliant fabrics for filter products – is crucial to your success. You can also count on Sefar's consistent supply of products during seasonal production peaks.

Applications

Citric acid, glutamate, gluten, lactic acid, lecithin, lignin, spirulina, starch, vanillin

### Sefar BDH Inc.

200 rue Clement Gilbert  
Saguenay QC, G7H 5B1 – Canada

Phone +1 418 690 0888  
Fax +1 418 690 9499

[info.bdh@sefar.com](mailto:info.bdh@sefar.com)

[Go to product page](#)

## Sefar filter solutions for OEM

Our products meet the specific needs of these filtration applications and are successfully running all over the world on all known vacuum filter brands and OEMs, such as:

Andritz Separation	BHS	EIMCO	Filtre Philippe
-----------------------	-----	-------	-----------------

FL Smidth	Hasler Group	Hitachi Zosen INVOA	Outotec
-----------	-----------------	---------------------	---------

Pannevis	RPA Process	Sonthofen	Tefsa
----------	----------------	-----------	-------

Tenova DELKOR	Thyssen Krupp	TSK	VLC
------------------	------------------	-----	-----

Westech	XING HE	Yantai Tongxing
---------	---------	-----------------

## Process requirements

**Chemical resistance**

**Temperature resistance**

**Mechanical properties**

### Sefar BDH Inc.

200 rue Clement Gilbert  
Saguenay QC, G7H 5B1 – Canada

Phone +1 418 690 0888  
Fax +1 418 690 9499

[info.bdh@sefar.com](mailto:info.bdh@sefar.com)

[Go to product page](#)



Sefar filter belts are made from carefully selected polymers such as PP, PET, PVDF and PEEK. The right choice of polymer helps to ensure the appropriate chemical resistance for each specific filter belt application.




Belts from Sefar are designed to maintain their performance during their entire life and ensure troublefree operation. The appropriate selection of material is crucial to ensure performance under high temperatures.



Sefar belts are designed to cope with heavy loads, quick rotating and extra large rotary drum filter units. Sefar fabrics are specially optimized for high strength, the best tracking stability and the longest possible belt life.

## Suspension properties

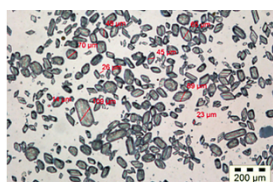

The offered pore size selection ranges from 5 µm to over 150 µm for the processing of various suspensions. Depending on the slurry properties, Sefar offers a suitable filter solution to meet your requirements concerning particle retention and filtrate

## Filtration capacity



Drum filter belts from Sefar have a maximized number of pores and optimized permeability to guarantee the expected throughput. Special needs concerning cake dryness or high filtration efficiency can be met by using the latest Sefar filter media

## Belt installation



Sefar offers innovative, proven and reliable closure systems for the entire belt range – from particle tight to chemical resistant. No additional installation equipment is necessary using Sefar filter belts. A trouble free and quick installation is guaranteed.

### Sefar BDH Inc.

200 rue Clement Gilbert  
Saguenay QC, G7H 5B1 – Canada

Phone +1 418 690 0888  
Fax +1 418 690 9499

[info.bdh@sefar.com](mailto:info.bdh@sefar.com)


[Go to product page](#)

clarity. developments.

## Filter media technology

Sefar double-layer weave technology is the unique filter media construction combining two different fabric layers mechanically through weaving. In comparison to a single-layer fabric, belts made from SEFAR **TETEX** DLW deliver outstanding filtration results: high vertical and lateral liquid flow properties, excellent resistance against creasing and mechanical stress. Best filtration results and enhanced lifetime is achieved by combining the functions of a fine filtration layer and a support drainage layer.

- Largest selection of polymers
- Largest selection of pore sizes
- High throughput and stable production rate
- Excellent cake washing and filtrate clarity
- Excellent cake discharge

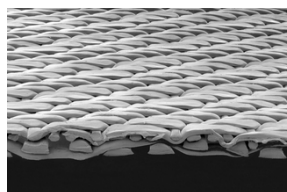

Double-layer fabric



### CONTACT

■ Local contact

#### Sefar BDH Inc.

200 rue Clement Gilbert  
Saguenay QC, G7H 5B1 – Canada

Phone +1 418 690 0888  
Fax +1 418 690 9499

[info.bdh@sefar.com](mailto:info.bdh@sefar.com)

[Go to product page](#)

■ [Contact form](#)

■ [Send mail](#)

Please call us for further information:

Phone CH: +41 71 898 5700

## Locations



### Sefar BDH Inc.

200 rue Clement Gilbert  
Saguenay QC, G7H 5B1 – Canada  
Phone: +1 418 690 0888  
Fax: +1 418 690 9499

■ [E-Mail](#)



### Sefar Inc.

Kansas City, MO – USA  
Phone: 800 995 0531  
Fax: +1 816 452 2183

■ [E-Mail](#)



### Sefar Inc.

Los Angeles, CA – USA  
Phone: 800 995 0531  
Fax: +1 909 544 5901

■ [E-Mail](#)

### Sefar BDH Inc.

200 rue Clement Gilbert  
Saguenay QC, G7H 5B1 – Canada

Phone +1 418 690 0888  
Fax +1 418 690 9499

[info.bdh@sefar.com](mailto:info.bdh@sefar.com)

[Go to product page](#)





**Sefar Inc.**

Gray, GA – USA  
 Phone: 800 995 0531  
 Fax: +1 478 986 6953

■ **E-Mail**



**Sefar Inc.**

111 Calumet Street  
 Buffalo, NY 14043 – USA  
 Phone: 800 995 0531  
 Fax:

■ **E-Mail**

**Sefar BDH Inc.**

200 rue Clement Gilbert  
 Saguenay QC, G7H 5B1 – Canada

Phone +1 418 690 0888  
 Fax +1 418 690 9499

[info.bdh@sefar.com](mailto:info.bdh@sefar.com)

[Go to product page](#)