
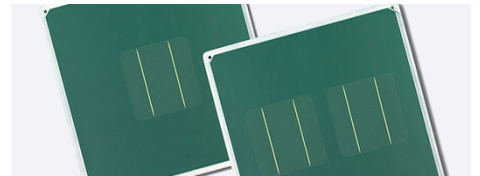


# Screen Fabrication

As the leading manufacturer of premium screen printing fabrics, Sefar Inc. knows mesh – and we know how to make the perfect screen!

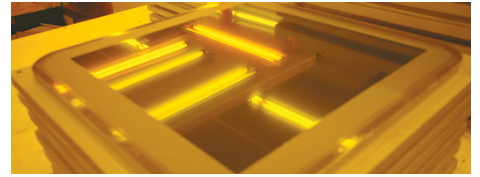

## Electronic / Solar Screens

### ISO 9001 Certified Electronic & Solar Screens

With over 40 years of combined experience stretching and imaging precision polyester and wire cloth electronic and solar screens, Sefar Inc. is your preferred screen service partner.


Sefar Inc. screen making services are flexible enough to stretch screens tailored to your operation, AND quality conscious to guarantee screens that will meet your production tolerances.

### Electronic Screen Fabrication

## DOWNLOADS

[Product Information Guide for Precision Electronic Screens \(PDF 8630 kb\)](#)

[Sefar Screen Checklist \(PDF 162 kb\)](#)

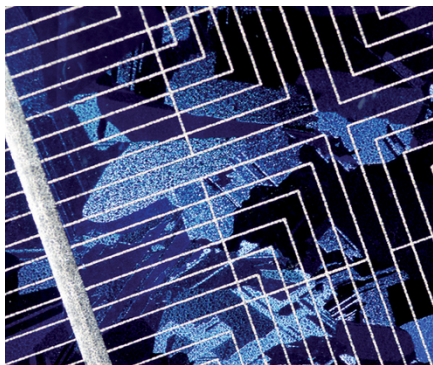

### Screen Applications:

- Thick Film Micro-Electronics
- Hybrid Circuits
- Solar / Photovoltaic Applications
- MCM's
- Ultra-fine Lines
- Microelectronic Packaging
- Low Temperature Co-fired Ceramics

## Sefar Inc.

Kansas City, MO – USA

Téléphone 800 995 0531  
 Fax +1 816 452 2183

[sales.us@sefar.com](mailto:sales.us@sefar.com)

[Aller au contenu](#)

- Diffusion Patterning Process
- Solder Paste & Adhesives
- Membrane Switches
- Electronic Display Systems
- Printed Circuits

**Screens made for your production needs:**

**Mesh Only Screens**

Made to order screens stretched using your preferred polyester or wire mesh, and perfectly balanced at your preferred angles (45°, 30°, 22.5°, 90° or custom angles)


**Presensitized Screens**

Screens can be coated with our high performance, dual cure emulsions from 0.0001 inch or greater. Sefar accommodates customer-specific emulsions as well.

**Imaged Screens**

Using customer-provided films or films produced by our internal artwork department (Artwork), screens can arrive at your facility ready to print! Find a detailed description of our screen services in our Product Information Guide for Precision Electronic Screens



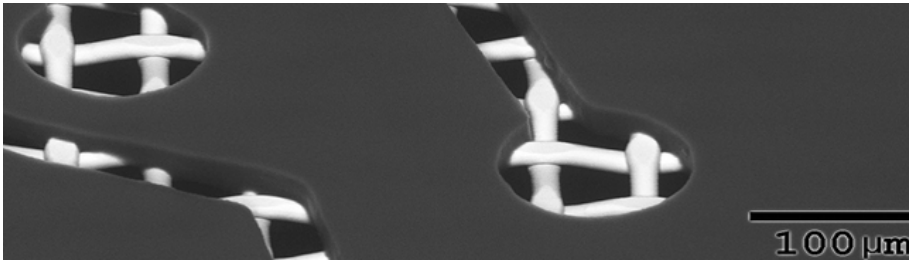

**Value Added Services**

**ISO 9001 Certified**

All Sefar Inc. screen locations (Kansas City, MO, Ontario, CA) are ISO 9001 Certified to help meet our customers' stringent quality standards.

**Quality Control**

Sefar Inc. conducts a 100% inspection at each step in the manufacturing process to ensure screens exceed quality expectations.

**Experienced Product Support**

Sefar Inc. offers an extremely qualified portfolio of experts to provide service and support before, during and after screens arrive at your facility.

**Customized Screens**

**We stretch your custom frames too!**

As the leading manufacturer of precision screen printing fabrics in the world, Sefar is familiar with the standards and requirements necessary for every screen printing application - from graphics to industrial to electronics! This makes us experts in screen-making for every industry and fabric type (monofilament polyester, nylon and wire cloth).

Please contact us directly to inquire about screen-making services for your special application. We would be happy to provide you with a quote and learn more about your screen stretching



**Sefar Inc.**

Kansas City, MO – USA

Téléphone 800 995 0531  
 Fax +1 816 452 2183

[sales.us@sefar.com](mailto:sales.us@sefar.com)

[Aller au contenu](#)

needs.

As our stretched-screen customer, you will also have access to technical support that can help improve the quality of your printing, as well as help your shop push the envelope to take on more challenging projects, and be a technical resource if you should ever have questions.



Trampoline Mounted Screen

### **Trampoline Mounted Screens**

Sefar Inc. is also capable of stretching more difficult screen configurations such as trampoline mounted screens. Consisting of stainless steel wire cloth supported by a border of polyester mesh, these screens combine the best properties of both mesh types (fine-line printing, and superior elasticity required for off-contact printing and long print runs).

### **How do I obtain a quote for my stretching needs?**

To learn more about how Sefar's screen stretching services can improve your print quality and production efficiency, contact our Inside Sales department at 716.683.4053. Please have the following information about your screen requirements on hand:

- Frame size (outside frame diameter, frame profile)
- Mesh specifications (include both threads-per-inch and thread diameter)
- Mesh tension requirements
- Mesh Angle (example: 45°, 22.5°, etc.)
- Emulsion type and thickness (EOM)
- Imaging / artwork requirements
- Image orientation

### **Locations**

#### **Sefar Inc.**

Kansas City, MO – USA

Téléphone 800 995 0531  
Fax +1 816 452 2183

[sales.us@sefar.com](mailto:sales.us@sefar.com)

[Aller au contenu](#)



### Sefar BDH Inc.

200 rue Clement Gilbert  
Saguenay QC, G7H 5B1 – Canada  
Phone: +1 418 690 0888  
Fax: +1 418 690 9499

 [E-Mail](#)



### Sefar Inc.

Kansas City, MO – USA  
Phone: 800 995 0531  
Fax: +1 816 452 2183

 [E-Mail](#)



### Sefar Inc.

Los Angeles, CA – USA  
Phone: 800 995 0531  
Fax: +1 909 544 5901

 [E-Mail](#)



### Sefar Inc.

Gray, GA – USA  
Phone: 800 995 0531  
Fax: +1 478 986 6953

 [E-Mail](#)



### Sefar Inc.

111 Calumet Street  
Buffalo, NY 14043 – USA  
Phone: 800 995 0531  
Fax:

 [E-Mail](#)

### Sefar Inc.

Kansas City, MO – USA

Téléphone 800 995 0531  
Fax +1 816 452 2183

[sales.us@sefar.com](mailto:sales.us@sefar.com)

[Aller au contenu](#)